FlowLite

# Seamless Wall Wash 0.81 - ALUMINUM LED CHANNEL
## Installation Instructions

| MODEL | MOUNTING | APERTURE | OVERALL WIDTH | LENGTH | MAX TAPE WIDTH | MAX TAPE POWER | RATING |
|---|---|---|---|---|---|---|---|
| **FL-WW81** | **Plaster-in (mud-in flange)** | **0.8" (20.6 mm)** | **4.3" (109.5 mm)** | **96" (8 ft)** | **20 mm** | **10 W/m (3.0 W/ft)** | **Dry / damp** |

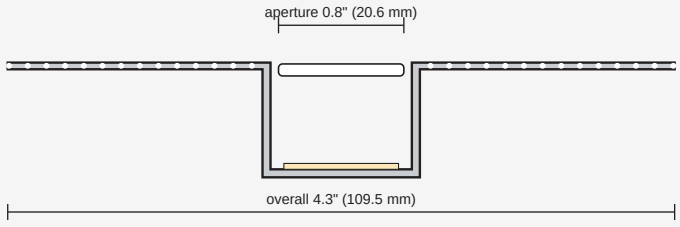
## ATTENTION: *Please read all instructions before installation*

**DISCONNECT POWER BEFORE INSTALLING TAPE OR MAKING CONNECTIONS**

- Always ensure the power supply is disconnected before installing tape in the channel or making any connection.
- Wiring to be installed by a qualified, licensed electrician in accordance with national and local electrical codes. Install the LED tape per its own FlowLite installation instructions.
- Use LED tape no wider than **20 mm** and no more than **10 W/m (3.0 W/ft)** in this channel. Higher wattage tape needs a larger profile to stay within its temperature limits.
- The channel is a housing: the light output, color and location rating come from the tape installed in it.
- **Plaster-in profile:** install after the drywall is hung and **before taping and finishing**. The perforated flange must sit flat on the board face and be fully covered with joint compound.
- Fasten the flange every 8"-12" with drywall screws into framing or blocking. Add continuous backing or blocking where the channel runs between framing members.
- Mask the light opening before mudding. Keep joint compound, sanding dust and paint out of the channel; install tape and lens only after the finish is complete and dry.
- Asymmetric optic: orient the profile so the light is aimed at the surface to be washed, as shown on the spec sheet drawing, before fastening.
- Dry or damp locations only, as rated by the tape installed. For wet locations use an IP65 FlowLite channel with IP-rated tape.
- Cut aluminum with a fine-tooth non-ferrous blade. Wear eye protection and gloves, deburr every cut, and remove chips before installing tape.
- Do not cover the channel with insulation, and do not install where it will be in direct contact with combustible materials.
- Test every run with the tape powered before installing lenses, end caps and trims.
- Diagrams for representation only and not to scale.
- Do not modify this product beyond these instructions or the warranty will be void. Failure to follow safety warnings and installation instructions will void the warranty.

## Profile

Cross-section, not to scale. Dimensions per the spec sheet.




Aperture 0.8" (20.6 mm) | Overall 4.3" (109.5 mm) | 96" (8 ft) per piece

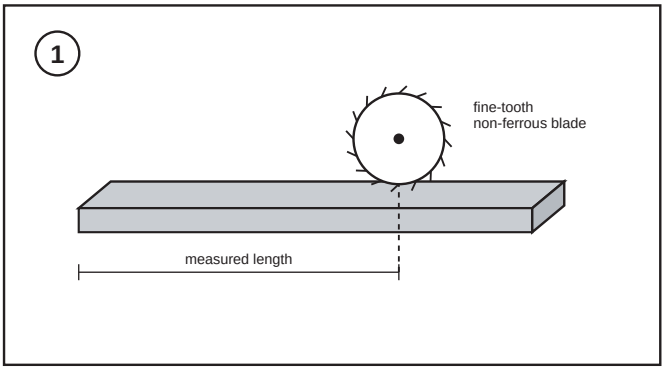
## In the box

- Aluminum profile, 96" (8 ft)
- Opal (frosted) polycarbonate lens
- End caps (pair, with wire entry)

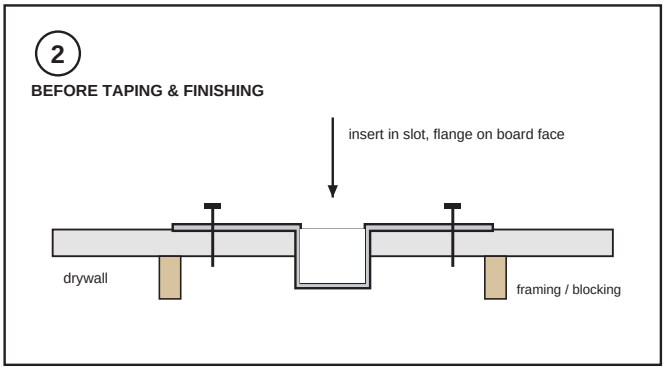
## You will need

- Miter saw with fine-tooth non-ferrous blade
- File or deburring tool
- Isopropyl alcohol (50/50 mix) and lint-free cloth
- FlowLite LED tape, max. 20 mm wide
- Drywall screws, mesh or paper tape, joint compound
- Masking tape for the opening

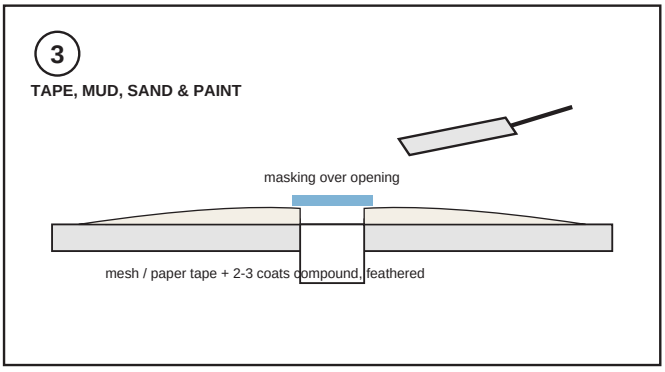
# INSTALLATION INSTRUCTIONS



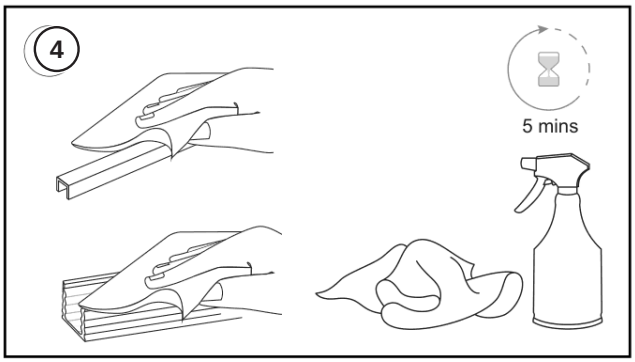

Measure the run and cut the profile and lens to length with a fine-tooth non-ferrous blade. Deburr the ends and blow out chips. Cut the lens slightly short so the end caps fit. Join pieces end to end with straight, tight joints.



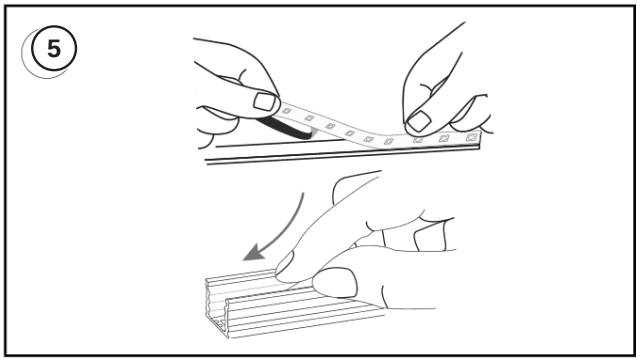

After the drywall is hung, fit the profile into the slot so the perforated flange lies flat on the board face. Screw the flange every 8"-12" into framing or blocking, keep pieces aligned, and check it is straight and level before finishing.



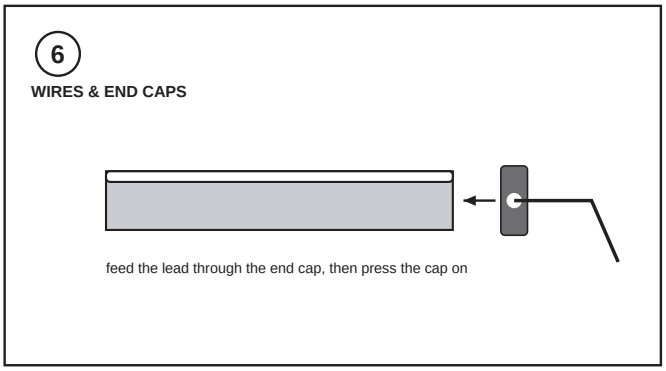

Mask the opening. Cover the flange with mesh or paper tape and apply 2-3 coats of joint compound, feathered and sanded flush to the profile edge. Prime and paint, then remove the masking. No compound or dust inside the channel.



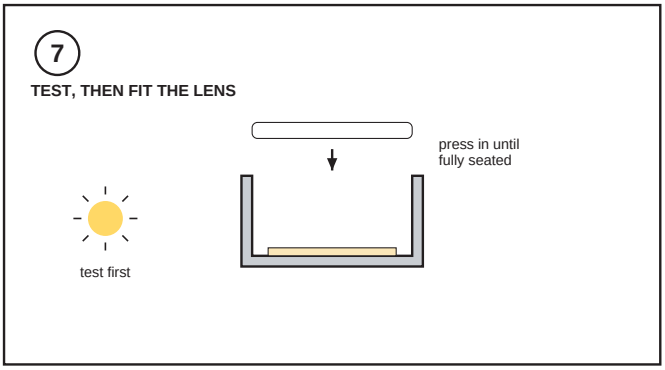

Using a 50/50 alcohol mix thoroughly clean the inside of the channel where the tape will sit. Allow time to dry (about 5 minutes).




Gently place the LED tape in the channel, centered on the floor. Peel back the liner in short increments and press firmly along the full length. Do not exceed 20 mm tape width or 10 W/m (3.0 W/ft).




Feed the lead wire through the end cap opening, connect it to the tape with correct polarity, and press the end caps on.




Power the run and check every section before closing. Then press the lens into the profile until it seats along its full length (or slide it in from one end). Keep the lens clean and handle it with gloves.

## Notes

- Compatible tape: FlowLite tape up to 20 mm wide and 10 W/m (3.0 W/ft).
- Feed every run per the tape's maximum run, from a Class 2 24V DC driver loaded to 80% or less.
- Location: dry or damp, as rated by the tape installed.
- Leave access to drivers and connections per code.

FlowLite reserves the right to change specifications without notice.